



## Setting inbound ringing options

Inbound Ringing options allow you to specify which extensions ring with inbound calls on a particular line. When you turn off inbound ringing on a line for an extension, that extension does not ring when calls come in on the line. When inbound ringing from other extensions is turned off, the extension will not ring with calls from other extensions in the network. Turning off inbound ringing for an extension also prevents the extension from using the Talk key to answer calls on the restricted line. The extension is only prevented from answering the restricted line when pressing Talk - it can still access the ringing line by pressing the line number.

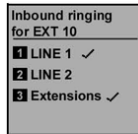

AirWay 308

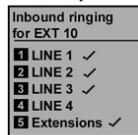


AirWay 516


1. Press and release **HOLD/MENU** until you reach the screen containing the Setup function.
2. Press 5 (Setup), then enter your Controller password (default 1234). Press **END** when finished.
3. Press 2 (Network).
4. Press 1 if the extension being configured is a Handset or 2 if the extension being configured is for a Phone Jack.
5. Press 3 (Configure), then enter the extension number you want to set inbound ringing for.
6. Press 3 (Inbound ringing).
7. Toggle the desired lines on or off by pressing the corresponding line number. A check mark indicates that inbound ringing is turned ON.
8. Press **END** when finished.

## Setting Outbound Line Selection

Outbound Line Selection options determine which lines an extension can access for outgoing calls by pressing the Talk key. The extension is only prevented from reaching the restricted line when pressing Talk - it can still access the line by pressing the line number.

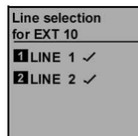

AirWay 308

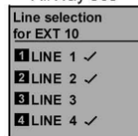


AirWay 516

1. Press and release **HOLD/MENU** until you reach the screen containing the Setup function.
2. Press 5 (Setup), then enter your Controller password (default is 1234). Press **END** when finished.
3. Press 2 (Network).
4. Press 1 if the extension being configured is a Handset or 2 if the extension being configured is a Phone Jack.
5. Press 3 (Configure), then enter the extension number you want to set outbound line selection for.
6. Press 2 (Outbound line selection).
7. Toggle the desired lines on or off by pressing the corresponding line number. A check mark indicates that outbound line selection is turned ON.
8. Press **END** when finished.

# AIRWAY

## Bluetooth Docking Station

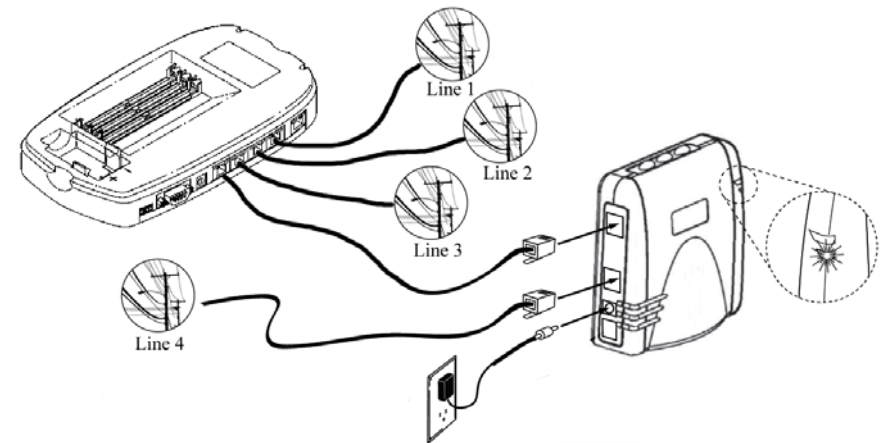

*Example: Using a shared line 4 port on the 516 controller.*

## Connecting the Docking Station

The Docking Station can be connected using a dedicated line port on the controller or a shared line port. If using a dedicated line port it is not required to plug a land line into the Docking Station. For an AirWay 516 system you can plug the Docking Station into any of the 4 line ports. On the handsets you will then be able to use your cell phone through that line. For the AirWay 308 system you can plug the docking station into the line 1 or line 2 ports.

*Mar Communications Ltd.*  
7300 Victoria Park Ave. Unit H  
Markham, Ontario L3R 1J1 Canada

www.homewireless.com  
905-480-9271

## Pairing cell phones

1. Make the connections as indicated.
2. Hold down one of the three line buttons until it starts flashing rapidly, which takes about 6 seconds.
3. Search for Bluetooth devices on your cell phone until it indicates it has found a Gateway. \*\*See your cell phone owner's guide for more information.
4. Enter the PIN number: 0 – 0 – 0 – 0 (If 0000 does not work try 1234)

NOTE: A paired cell phone can be “unpaired” by holding down the blue line button for about 6 seconds, until it flashes rapidly.

## Dialing with your AirWay Docking Station (Dedicated Line)

- a. Pick up any handset and press the number key that corresponds to the line the docking station is plugged into. For example if the docking station is plugged into line 4 as the diagram shows simply press “4” on the AirWay Keypad.
- b. Dial as you normally would. If you hear an error tone (a series of rapid beeps), that means there are no cell phones available to make the call. Be sure at least one cell phone is paired to the Docking Station and within Bluetooth range.

## Dialing with your AirWay Docking Station (Shared Line)

- c. Pick up any handset and press the number key that corresponds to the line the docking station is plugged into. For example if the docking station is plugged into line 4 as the diagram shows simply press “4” on the AirWay Keypad.
- d. The Docking Station will by default dial out using your land line. To call using the cell phone press flash (TALK) then dial as you normally would. If you hear an error tone (a series of rapid beeps), that means there are no cell phones available to make the call. Be sure at least one cell phone is paired to the Docking Station and within Bluetooth range.

\*To dial a call through a specific cell phone, dial the line number (1, 2, or 3) to which the cell phone is paired, press “flash” on your handset, then dial the number or use speed dial as usual.

## Answering calls

Each cell phone line on the Docking Station has a distinctive ring pattern, allowing you to easily determine which phone line is ringing. The “flash” key on the handsets can toggle between calls, just as with call waiting.

## Light Indicator

### *Green solid:*

Indicates the unit is powered and running normally.

### *Red flashing:*

Indicates an active phone line plugged into an incorrect port. Disconnect any telephone line connections until the red light goes off. When reconnecting, be sure that the active phone line is plugged in to the correct port, as shown in the image.

### *Blue solid:*

Indicates the unit is connected to a cell phone on that line.

### *Blue flashing fast:*

Indicates the line is in pairing mode. Use your cell phone to search for the Docking Station.

### *Blue flashing slow:*

Indicates the line is paired, but the cell phone is currently out of range.

## Managing the Bluetooth connection

Once the Docking Station is paired with a cell phone it automatically tries to connect to that phone when it comes in range. The slow flashing light indicates that the Docking Station is searching for the cell phone on that line, but can not find it. When the cell phone comes in to range, it automatically connects to the cell phone and the light goes solid.

If you are on a cell phone call and walk in to Bluetooth range, the Docking Station connects to your cell phone and routes the call to your handsets. Simply pick up any handset to continue the call. If a dial tone is heard on the handset, press \* # to connect the call.

To prevent live calls from being transferred automatically, or to have a live call on a handset transfer to the cell phone, press the blue button (which will be on, or flashing) once. The light turns off. If you were on a call, audio is transferred to the cell phone.

When the light is off (but the line is paired), press the button once to make the Docking Station start searching for the cell phone.